


J

Ersatzteile - Spare parts - Pièces de rechange - Reserveonderdelen - Parti di ricambio - Reservedele - Reservdelar
|´p´ñā´ćž .ñóĀúĥ´ëüÊìîÊžWμøp´ÆiüÆüGž!zā´ĆpĒaĥÊāž füÊaÊÆÊāÁØüĒÀžЗапасные части - 备件

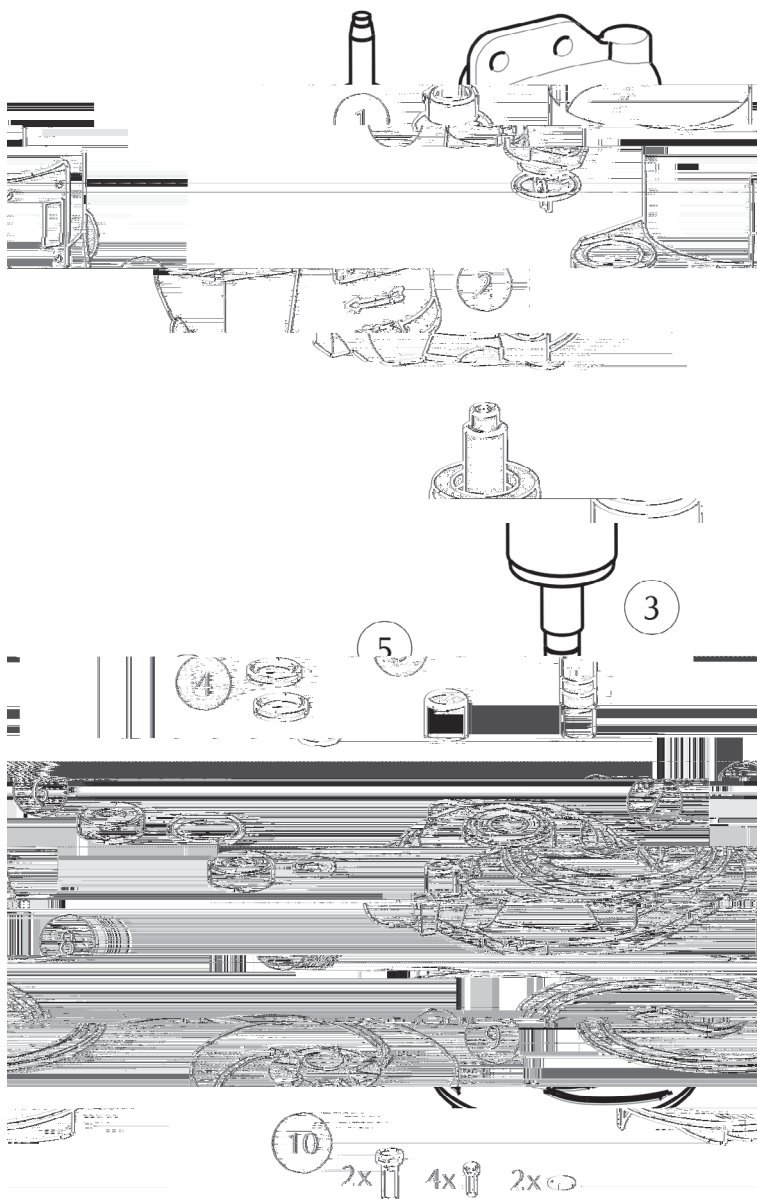

① Steuerung	Control unit	
1010/4 BWE		JP47285
1010/4, 1015/4		JP47286
1025/4, 1025/2		JP45786
1035/2		JP45787
② DN 150 / DN 100	DN150 / DN 100	JP48871
③ Klemmflansch	Clamping flange	JP43713
④ Wartungsdeckel	Service lid	JP42798
⑤ Überschiebmuffe	Collar	JP47287
⑥ Behälter	Tank	JP44861
⑦ Steuerungsplatine	Control board	JP47304
⑧ Niveauerfassung	Level control	
4 m Leitung	4 m cable	JP43712
15 m Leitung	15 m cable	JP48227
⑨ Pumpenlüftung	Pump ventilation	JP43710
⑩ Auftriebssicherung	Anti floating	JP43709
⑪ Pumpe	Pump	
1010/4 BWE, 4 m		JP46754
1010/4 BWE, 15 m		JP48684
1010/4		JP45778
1015/4		JP45779
1025/4		JP45780
1025/2		JP48826
1035/2		JP48827
⑫ Elast. Verbindung	Elastic connector	JP43705
⑬ Gehäuse Klappe	Housing valve	JP46813
⑭ Flansch	Flange	JP43706
⑮ Doppelklappe	Duplex flap	JP46812
⑯ Basisplatte	Base plate	JP43714
⑰ Dichtband	Sealing tape	JP47966



① Leitung	Cable
10/4, 15/4, 25/4	JP43717
1010/4 BWE, 4 m	JP43721
1010/4 BWE, 15 m	JP48685

② Stator	Stator
----------	--------

1010/4 BWE, 10 m	JP43722
1010/4 BWE, 15 m	JP43791
1010/4 BWE, 10 m	JP48801

③ Motorabdichtung	Motor seal
-------------------	------------

④ Impellerfixierung	Impeller fixation
---------------------	-------------------

10/4, 15/4, 25/4	JP48802
1010/4 BWE, 10 m	JP48803

⑤ Lagersatz	Bearing set
-------------	-------------

⑥ Lagerschild	Bearing housing
---------------	-----------------

⑦ Dichtungssatz	Seal set
-----------------	----------

⑧ Laufrolle	Impeller
-------------	----------

1010/4 BWE, 10 m	JP48804
10/4	JP45723
15/4	JP45725
25/4	JP45726

⑨ Primärpumpe	Primary pump
---------------	--------------



UC 25/2 - 35/2

b

①	Leitung	Cable	JP43717
②	Stel	Stel	Stelror
